



Basic Operating instructions for the EasyConnect HD Room System

- 1) Turn on the Projector to see the Portal interface on the screen
- 2) Use the wireless mouse to navigate the EasyConnect HD Meeting Portal interface and click the button for the meeting room you wish to join




 
- 3) Once you are in the meeting you will have access to the In-Meeting Controls
 - a) Click the Microphone icon to mute your microphone
 - b) Click "End Meeting" or "Leave Meeting" to exit the meeting



4) You can use the provided remote control to pan, tilt, and zoom the high definition camera to make sure everyone in the physical conference room is in view

*Note: The audio volume buttons on this remote do not adjust the volume on your HDTV display

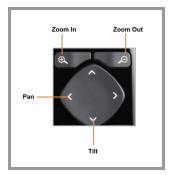









SCREEN SHARING WHILE USING A ROOM SYSTEM

These instructions are intended for users that are using their own computer while in the same physical room as the EasyConnect HD Room System.

NOTE:

- The Room System's wireless mouse should only be used to join and exit meetings. <u>PLEASE LEAVE WIRELESS MOUSE AT THE FRONT TABLE.</u>
- <u>DO NOT JOIN THE MEETING ON YOUR LAPTOP!</u> Choose the "Screen Share" option on the portal. (See step 2)

1) Start Meeting on Room System

A. Join or Start the meeting using the EasyConnect HD Room System

2) Open Portal on Your Computer

- A. Open the EasyConnect HD Portal (tealwood.easyconnecthdportal.com)
- B. Navigate to the desired meeting room and choose the "SCREEN SHARE" icon that is below the **virtual meeting room** button



3) Share Your Computer's Screen (Prompt shown below will appear)

- A. Click "Desktop"
- B. Click "Share Screen"



